Trimsheet					
Conditions		Mast			Jib
Sea state	wind strength	Mast rake*	Diamond tension	forstay tension	Jib block position on beam
flat	3 to <mark>8</mark> knots	5,2°	170kg	100kg	inboard
	8 to 12 knots	5,2°	190kg	100kg	inboard
	12 to 18 knots	5,6°	220kg	100kg	middle
	18 to 25 knots	5,6°	250kg	100kg	outboard
nedium	3 to <mark>8</mark> knots	5,2°	170kg	100kg	inboard
	8 to 12 knots	5,2°	190kg	100kg	inboard
	12 to 18 knots	5,6°	220kg	100kg	middle
3	18 to 25 knots	5,6°	250kg	100kg	outboard
large	3 to <mark>8</mark> knots	5,2°	170kg	100kg	inboard
	8 to 12 knots	5,2°	190kg	100kg	middle
	12 to 18 knots	5,6°	220kg	100kg	middle
	18 to 25 knots	5,6°	250kg	100kg	outboard





\* Mast rake can be measured by measuring the angle difference between transom and mast. This needs to be done with 100kg forestay tension and can be done with your phone by using a level app. Always measure rake with the mast rotatated in the middle